


Arcade cabinet: how a coin starts the game

AN-002

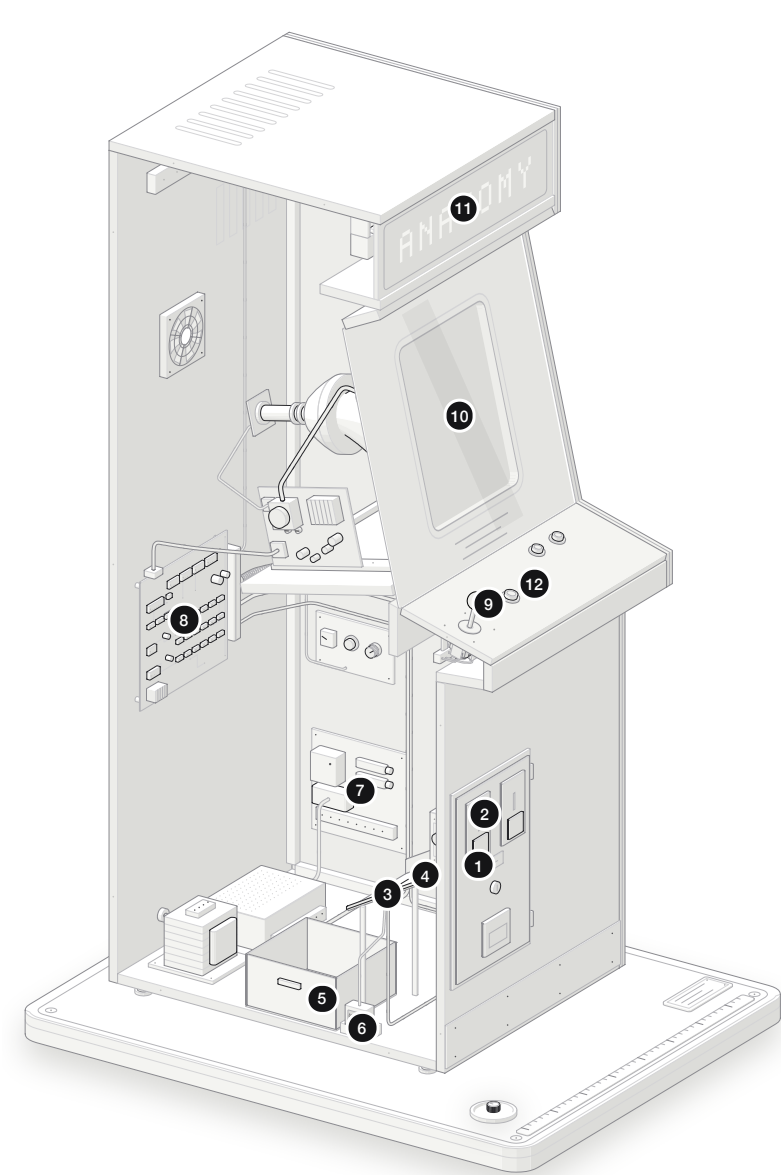


PARTS


- 01 Coin door and slot
- 02 Coin mech
- 03 Coin switch
- 04 Coin chute
- 05 Cash box
- 06 Coin meter
- 07 Power relay, transformer and supply
- 08 Game board
- 09 Harness and edge connector
- 10 Monitor: CRT and chassis
- 11 Marquee lamp
- 12 Control panel

SPECIFICATION


Style	Upright, 1981
Height	178 cm
Coin	US quarter, 24.26 mm
Drop	27 cm into the cash box
Picture	224 × 288, on its side
Line rate	15.734 kHz
Warm-up	About 2 s

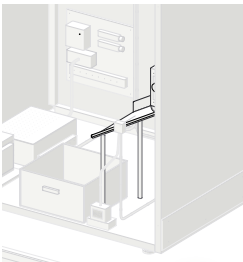


01
The mech checks the coin

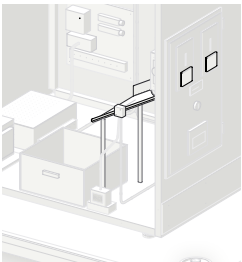

02
It brushes the switch wire

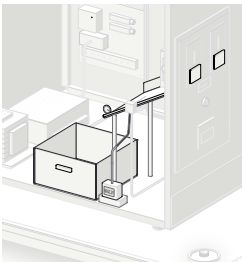

03
It drops into the cash box

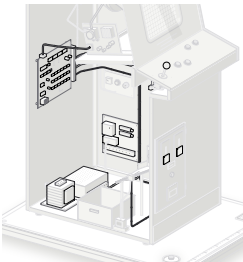

04
The relay wakes the cabinet



05
Attract mode